ІНСТРУКЦІЯ ПО СКЛАДАННЮ: **ВЕРСТАК СЕРІЇ "ПРОФІ" (НАВІСНІ ЕЛЕМЕНТИ)**

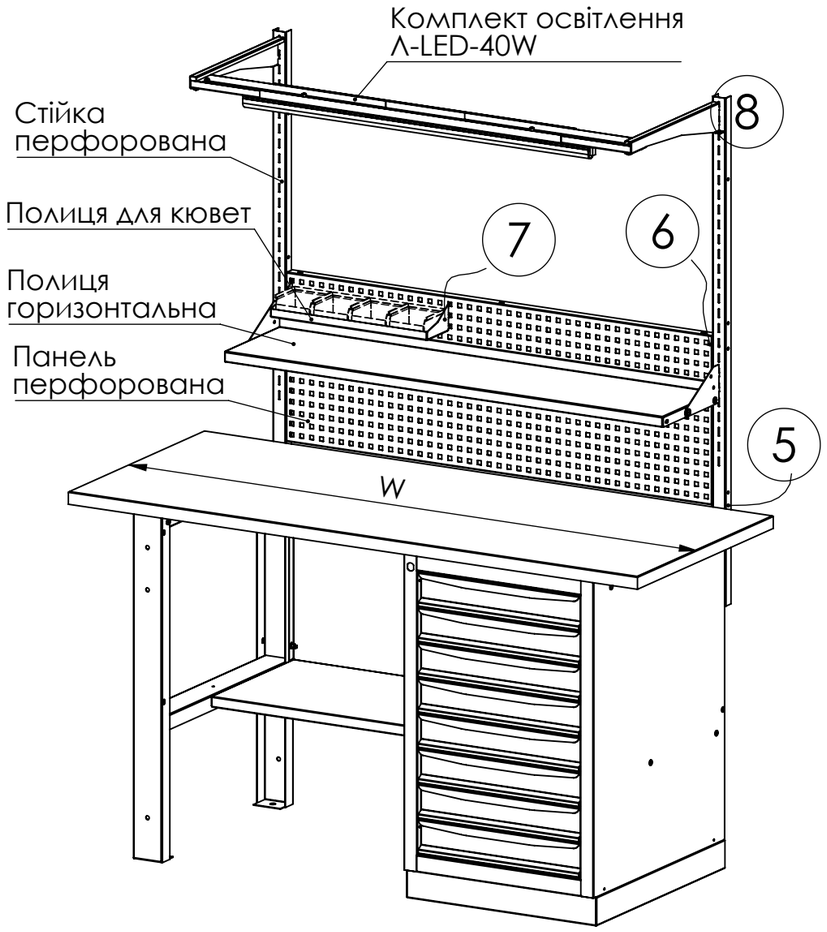

Встановлення навісних елементів:

на перфорацію

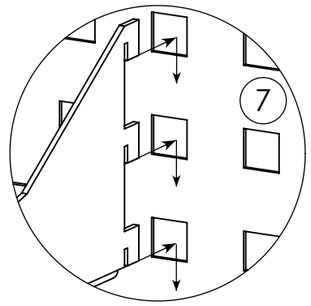

на стійку

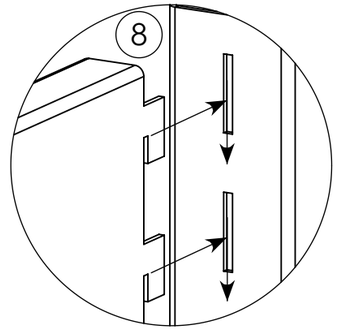

Кріплення **Стійок перфорованих**

Стійка перфорована - 2 шт.
Болт M6x20
Шайба плоска 6
Шайба стопорна 6
- 4 шт.

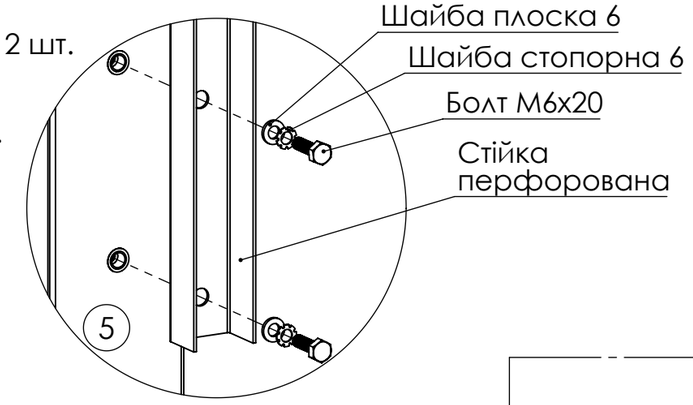

Кріплення **Панелі перфорованої**

Панель перфорована - 1 шт.
Болт M6x14
Шайба плоска 6
Шайба стопорна 6
Гайка M6
- 4 шт.

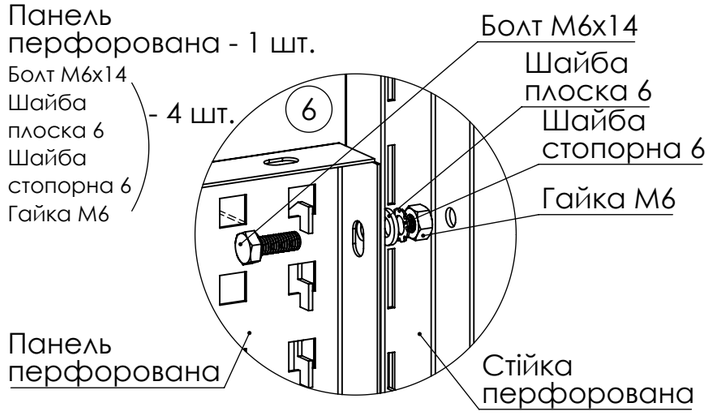

Складання **Полиці горизонтальної**

Кронштейн - 2 шт.
Полиця - 1 шт.

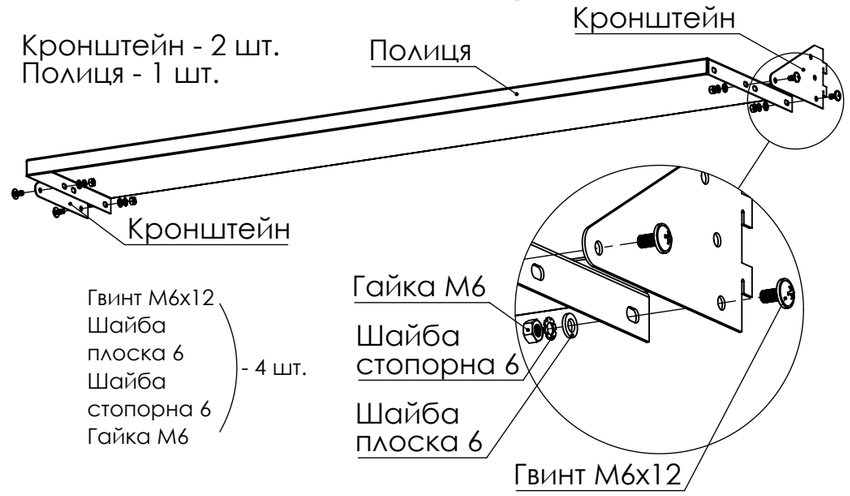

Кріплення **Перфорованої надставки ПН**

Кронштейн - 2 шт.
Перфорація - 1 шт.

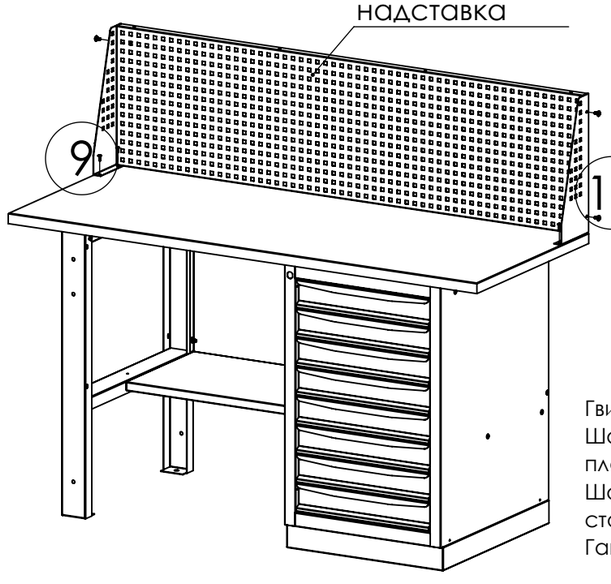

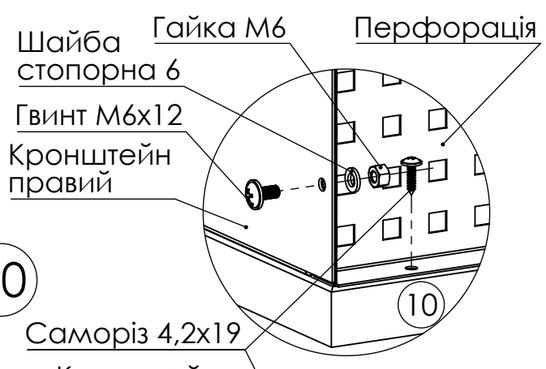

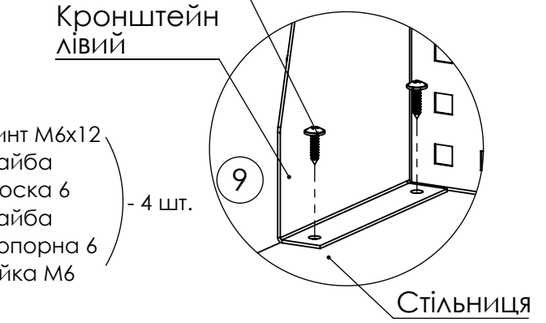

Складання **Комплекту освітлення**

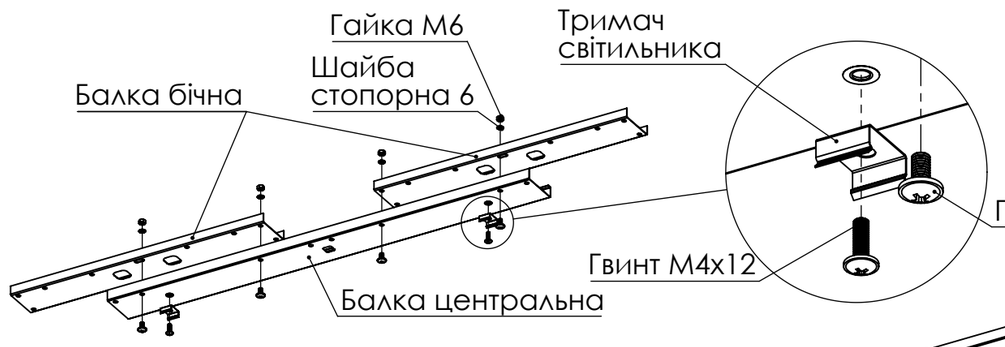

Гвинт M4x16 - 2 шт.
Застичкач гвинтовий - 1 шт.
Гвинт M6x12
Шайба стопорна 6
Гайка M6
- 8 шт.

Гвинт M6x12

Кронштейн - 2 шт.
Балка центральна - 1 шт.
Балка бічна - 2 шт.
Світильник - 1 шт.

Ширина балки світильника змінна.
Ширина кріплення балок бічних
до центральної залежить від ширини (W) верстака.

***Можливі зміни в конструкції виробу, які не погіршують його якість, що не враховані в даній інструкції.*

**Зовнішній вигляд верстака (варіація тумб/опор) може змінюватись в залежності від індивідуального замовлення. Показано загальне зображення.*

ІНСТРУКЦІЯ ПО СКЛАДАННЮ: **ВЕРСТАК СЕРІЇ "ПРОФІ"**

Складання **Опори верстачної**

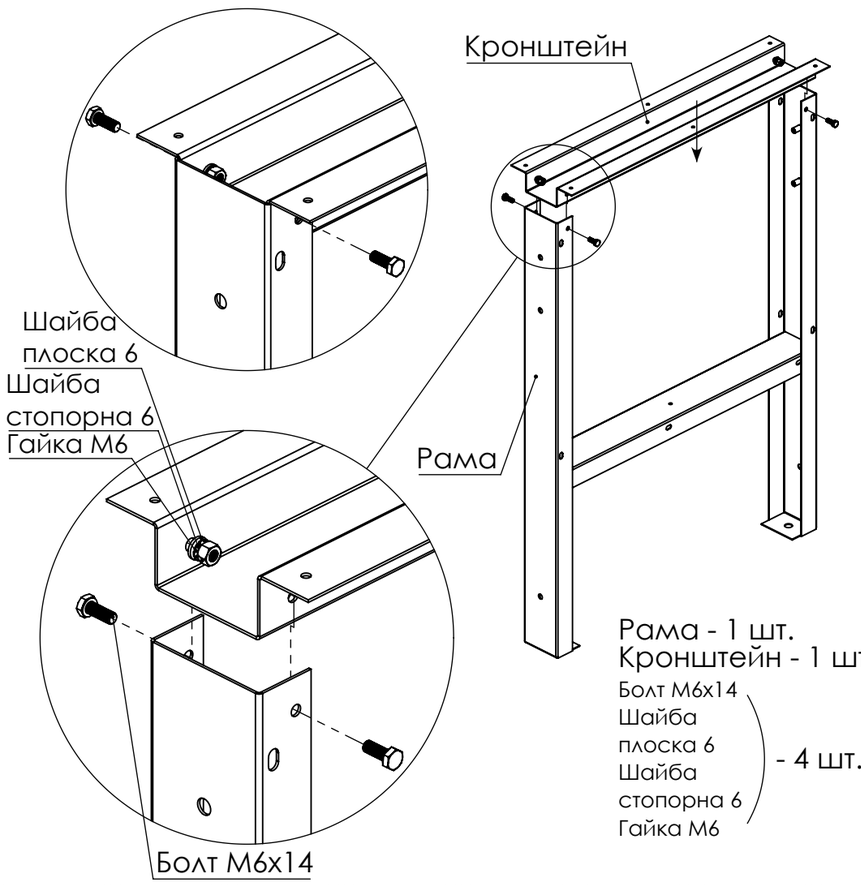

Рама - 1 шт.
Кронштейн - 1 шт.

Болт М6х14
Шайба плоска 6
Шайба стопорна 6
Гайка М6
- 4 шт.

Складання **Безтумбового верстака**

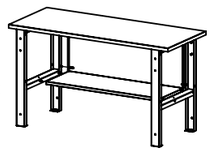

Опора верстачна - 2 шт.
Полкокомплект - 1 шт.
Стільниця - 1 шт.

Болт М6х14
Шайба плоска 6
Шайба стопорна 6
Гайка М6
Саморіз 4,2х19 -14 шт.
- 8 шт.

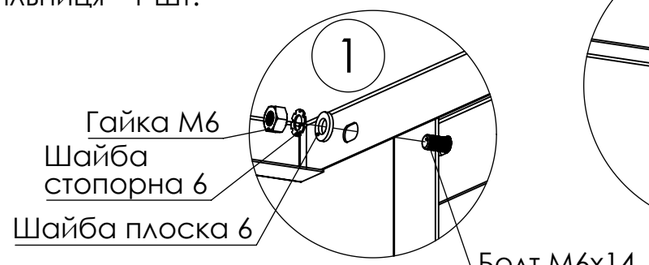

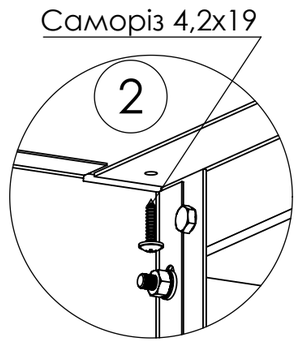

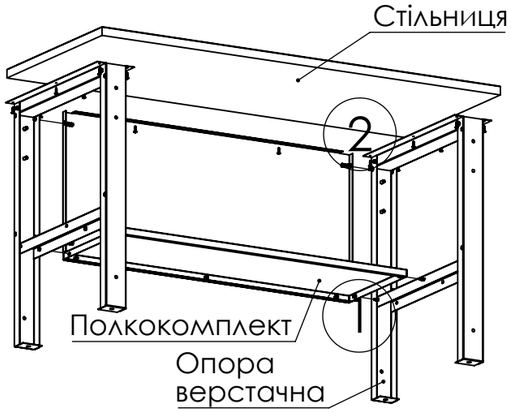

Складання **Однотумбового верстака**

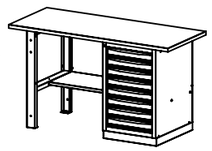

Опора верстачна - 1 шт.
Тумба верстачна - 1 шт.
Полкокомплект - 1 шт.
Стільниця - 1 шт.

Болт М6х14 - 4 шт.
Гайка М6 - 4 шт.
Болт М6х20 - 4 шт.
Шайба плоска 6 - 8 шт.
Шайба стопорна 6 - 8 шт.
Саморіз 4,2х19 - 14 шт.

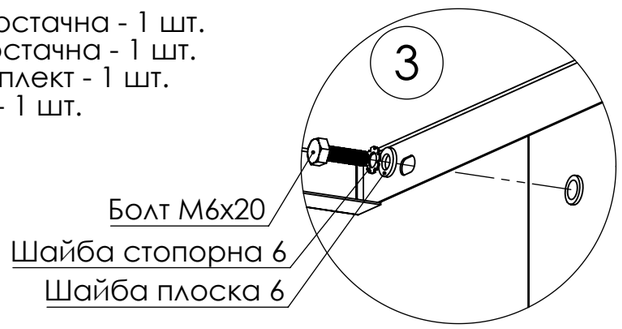

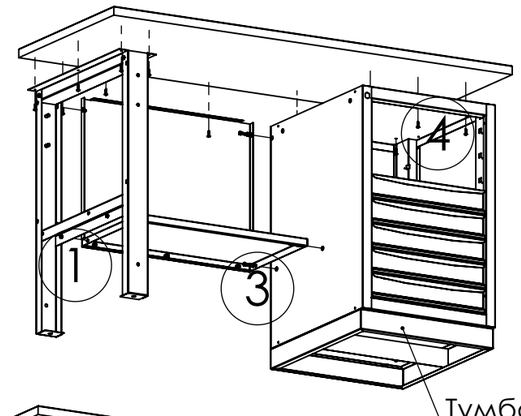

Складання **Полкокомплекту**

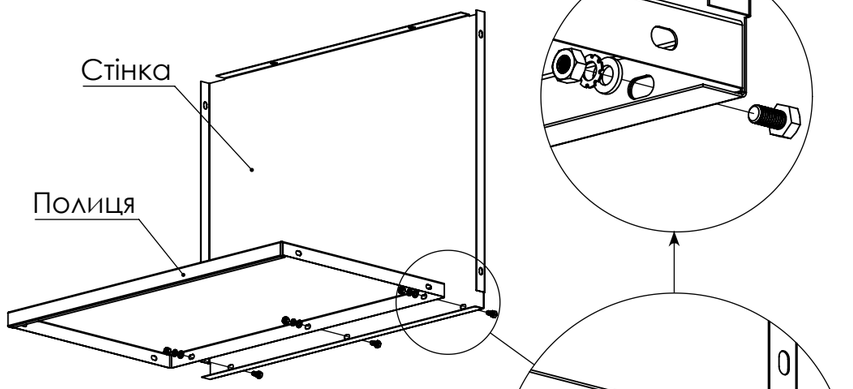

Полиця - 1 шт.
Стінка - 1 шт.

Болт М6х10
Шайба плоска 6
Шайба стопорна 6
Гайка М6
- 3 шт.

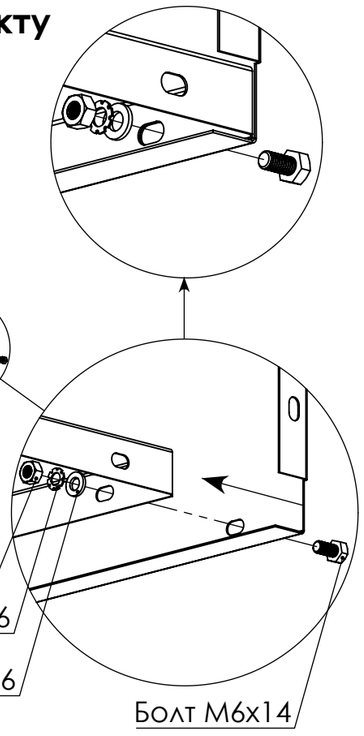

***Можливі зміни в конструкції виробу, які не погіршують його якість, що не враховані в даній інструкції.*

Складання **Двотумбового верстака**

для верстаків шириною 1800 мм

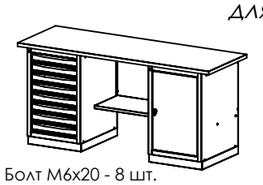

Тумба верстачна - 2 шт.
Полкокомплект - 1 шт.
Стільниця - 1 шт.

Болт М6х20 - 8 шт.
Шайба плоска 6 - 8 шт.
Шайба стопорна 6 - 8 шт.
Саморіз 4,2х19 - 14 шт.

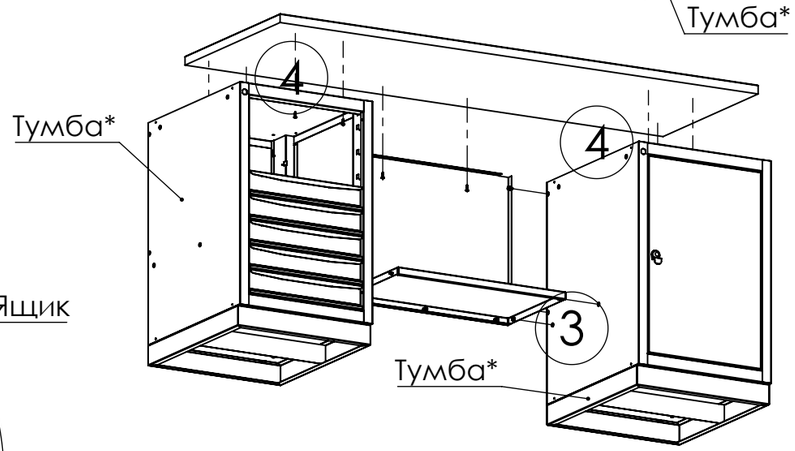

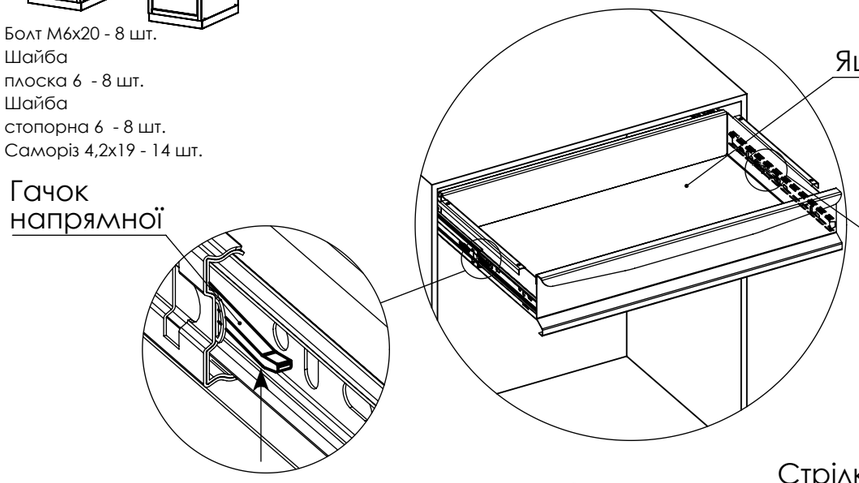

Для кріплення стільниці саморізами до тумби з висувними ящиками **необхідно вийняти** верхні ящики з тумби.
Для цього:
висунути ящик до упору, натиснути за гачки на напрямних з обох сторін ящика - один вверх, інший вниз та продовжити висувати ящик.

Стрілками на зображеннях показано напрям натискання на гачки.

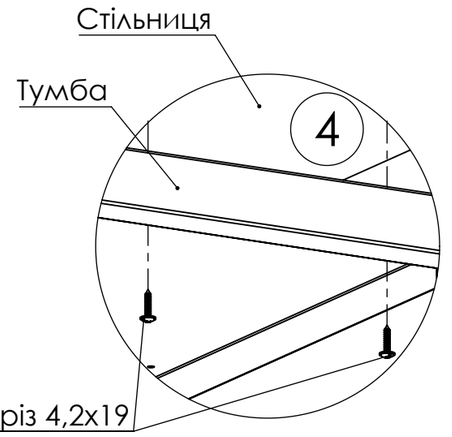

**Зовнішній вигляд тумб (варіація ящиків) може змінюватись в залежності від індивідуального замовлення. Показано загальне зображення.*

ASSEMBLY INSTRUCTIONS: **WORKBENCH SERIES "PROFI " (HINGED ELEMENTS)**

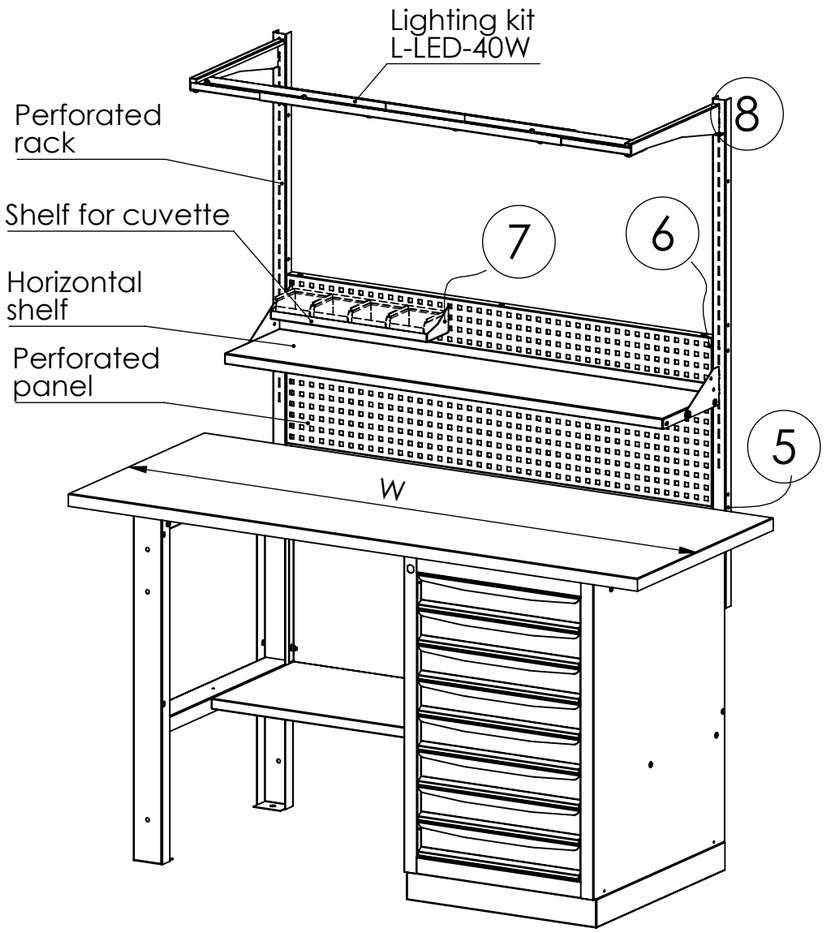

Mounting of **Perforated racks**

Perforated rack - 2 pcs.
Bolt M6x20
Flat washer 6
Lock washer 6
- 4 pcs.

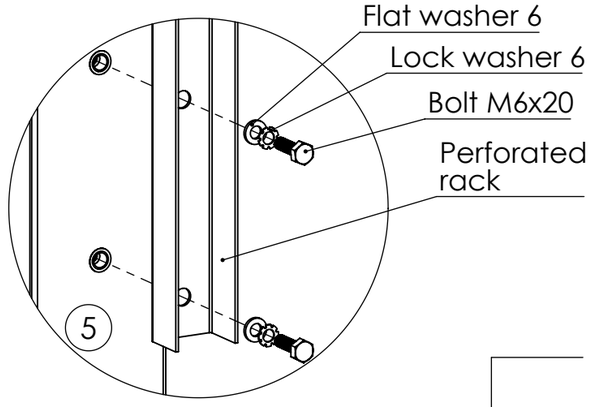

Installation of hinged elements:

on perforation

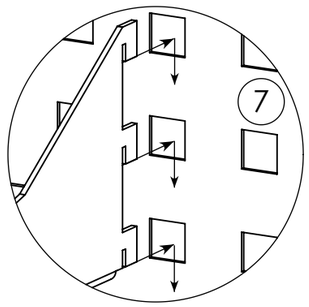

on the rack

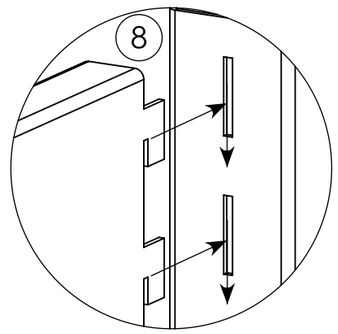

Mounting of the **Perforated panel**

Perforated panel - 1 pcs.
Bolt M6x14
Flat washer 6
Lock washer 6
Nut M6
- 4 pcs.

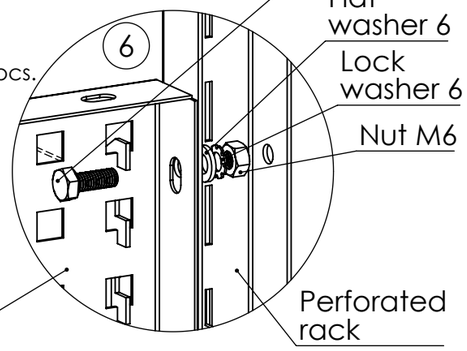

Assembly of the **Horizontal shelf**

Bracket - 2 pcs.
Shelf - 1 pcs.

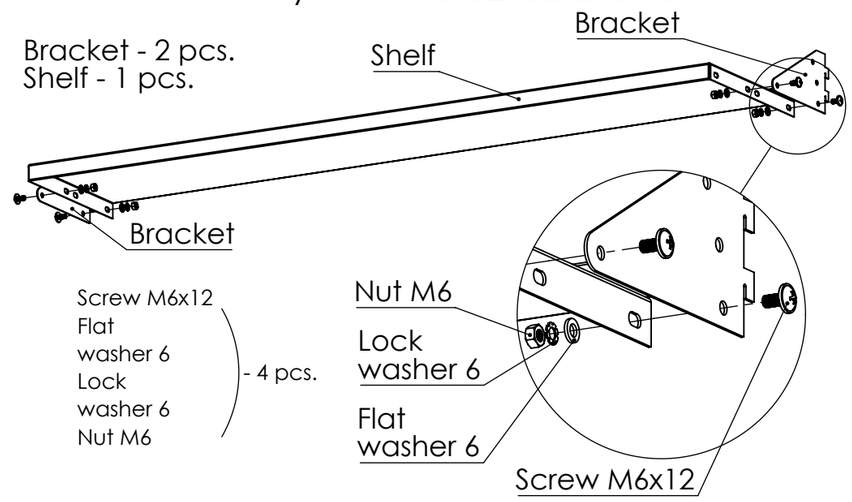

Mounting of the **Perforated extension plate**

Bracket - 2 pcs.
Perforation - 1 pcs.

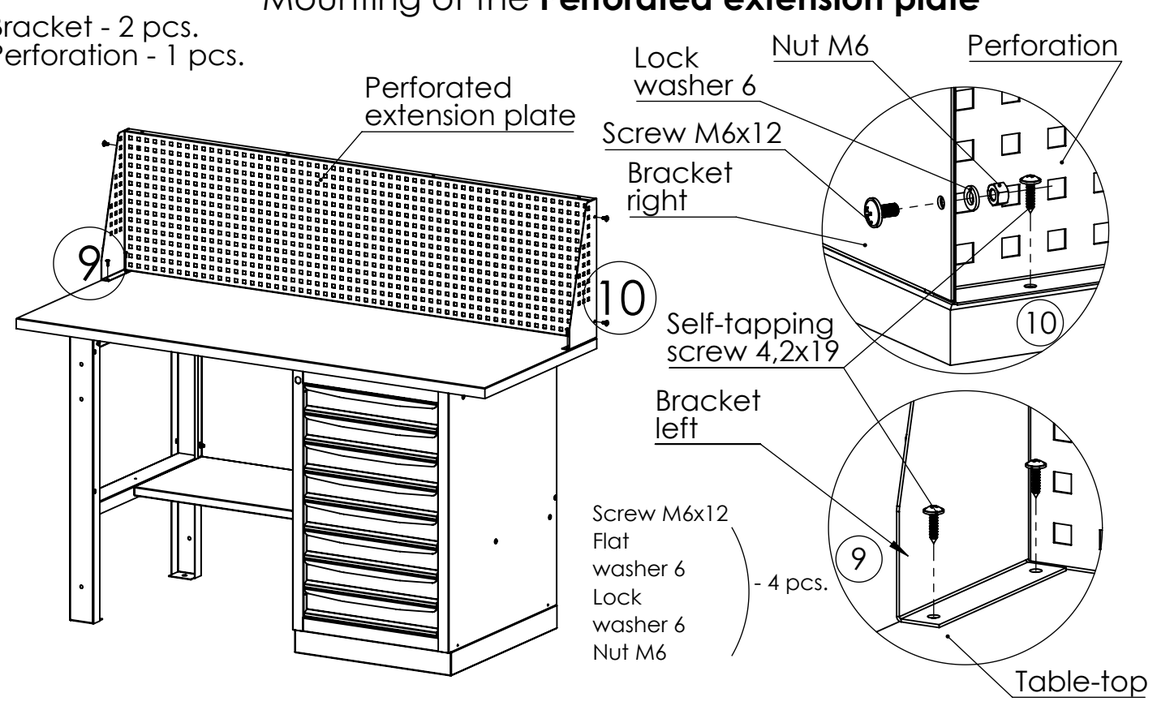

Assembling the **Lighting kit**

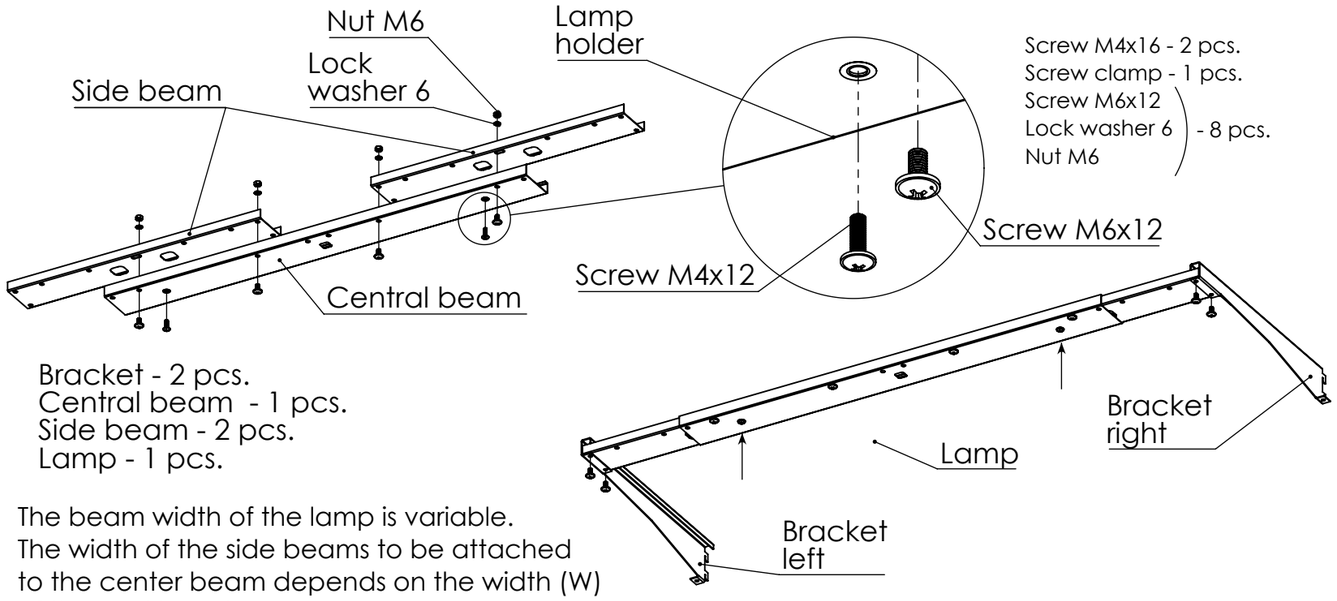

Bracket - 2 pcs.
Central beam - 1 pcs.
Side beam - 2 pcs.
Lamp - 1 pcs.

The beam width of the lamp is variable.
The width of the side beams to be attached to the center beam depends on the width (W) of the workbench.

***There may be changes to the design of the product that do not impair its quality which are not described in this instruction.*

**The design of the workbench (variation of cabinets/supports) may change depending on the individual order. Shown is a general image.*

ASSEMBLY INSTRUCTIONS: **WORKBENCH SERIES "PROFI"**

Assembly **Workbench support**

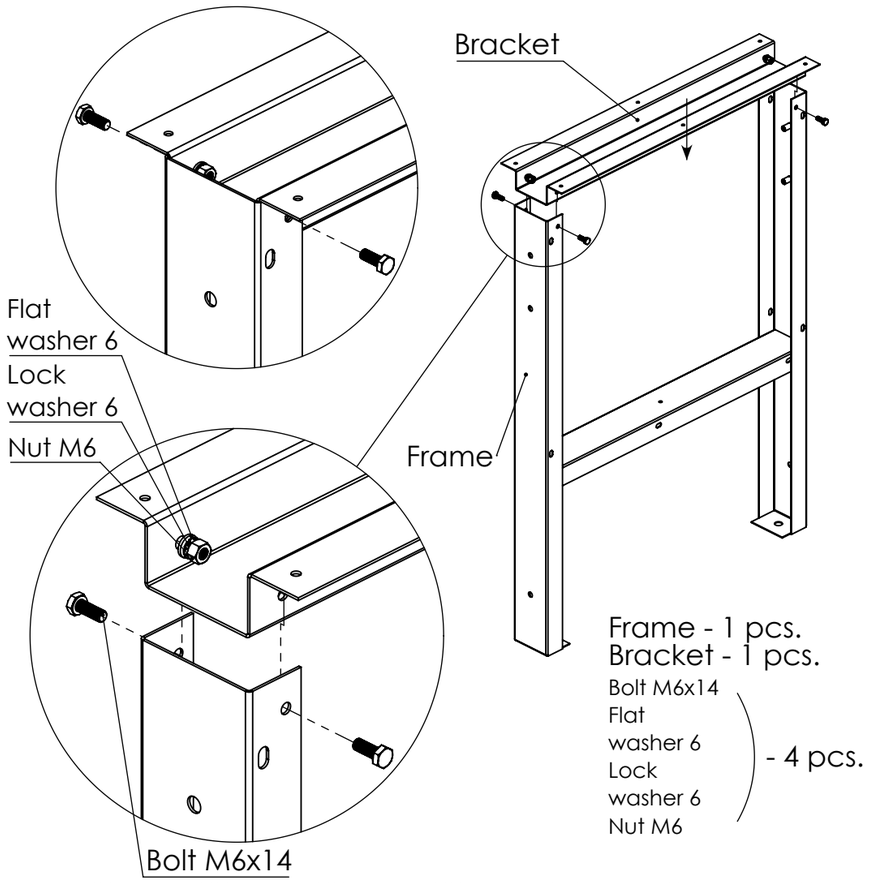

Frame - 1 pcs.
Bracket - 1 pcs.
Bolt M6x14
Flat
washer 6
Lock
washer 6
Nut M6
- 4 pcs.

Assembly **Shelf set**

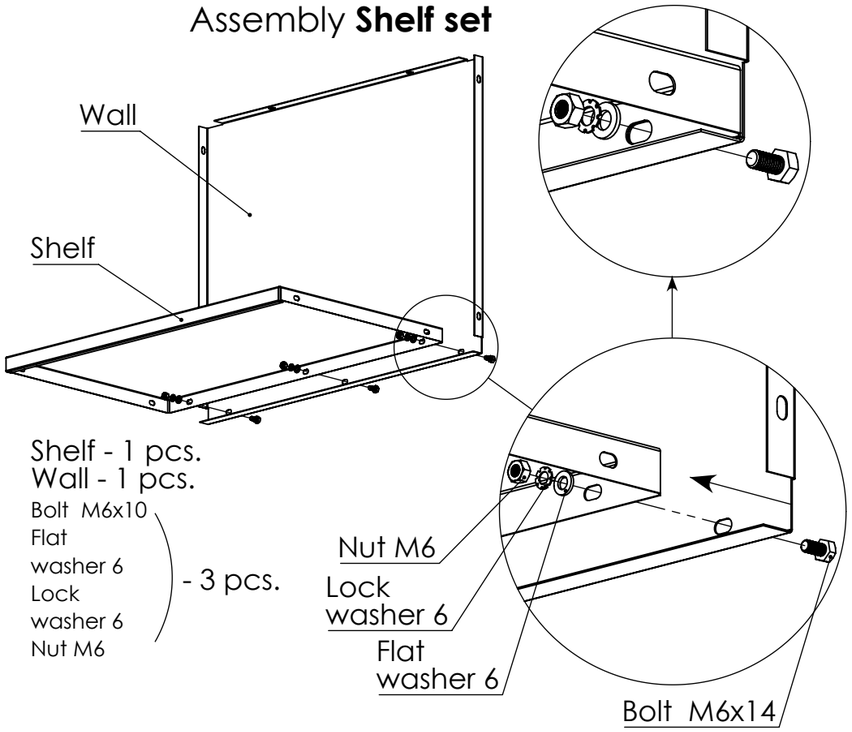

Shelf - 1 pcs.
Wall - 1 pcs.
Bolt M6x10
Flat
washer 6
Lock
washer 6
Nut M6
- 3 pcs.

Assembling **Non-cabinet workbench**

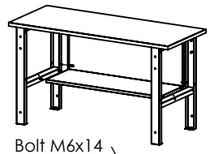

Workbench support - 2 pcs.
Shelf set - 1 pcs.
Table-top - 1 pcs.

Bolt M6x14
Flat
washer 6
Lock
washer 6
Nut M6
Self-tapping
screw 4,2x19 -14 pcs.
- 8 pcs.

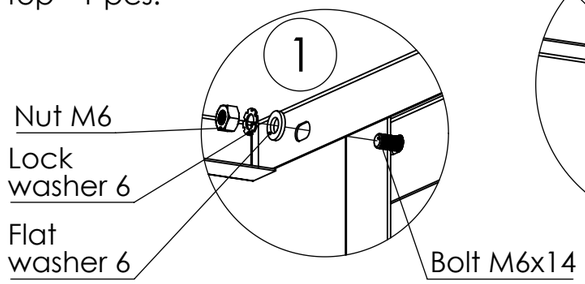

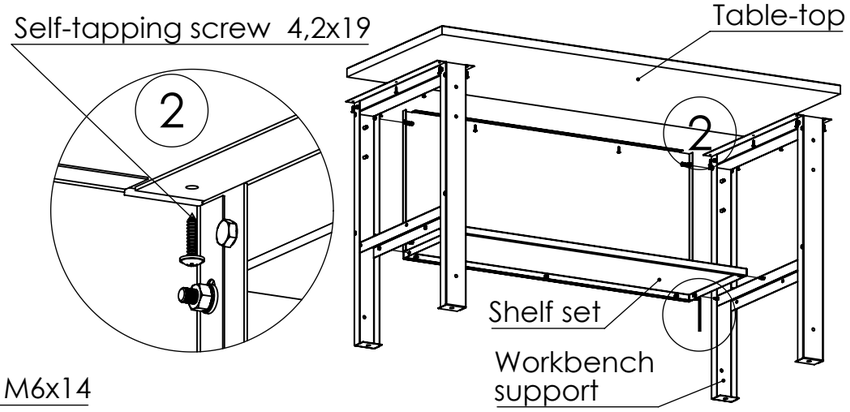

Assembling **Single-cabinet workbench**

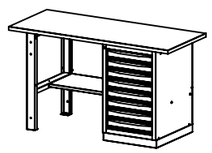

Workbench support - 1 pcs.
Workbench cabinet - 1 pcs.
Shelf set - 1 pcs.
Table-top - 1 pcs.

Bolt M6x14 - 4 pcs.
Nut M6 - 4 pcs.
Bolt M6x20 - 4 pcs.
Flat washer 6 - 8 pcs.
Lock washer 6 - 8 pcs.
Self-tapping
screw 4,2x19 - 14 pcs.

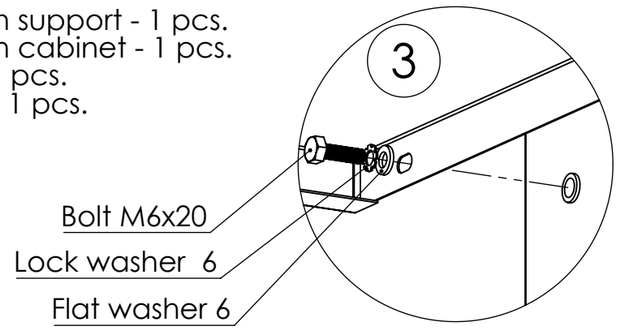

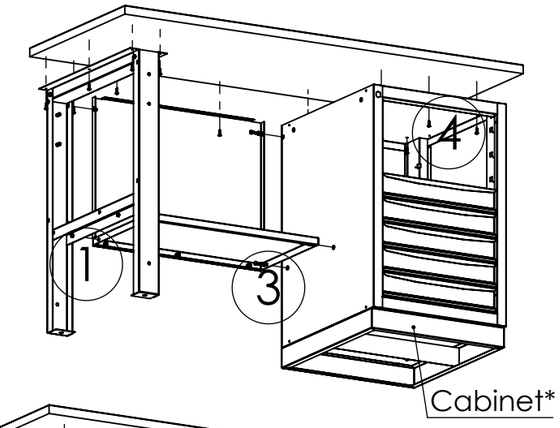

Assembling **Two-cabinet workbench**

for workbenches with a width of 1800 mm

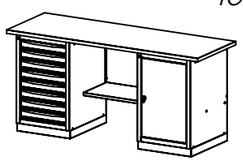

Workbench cabinet - 2 pcs.
Shelf set - 1 pcs.
Table-top - 1 pcs.

Bolt M6x20 - 8 pcs.
Flat washer 6 - 8 pcs.
Lock washer 6 - 8 pcs.
Self-tapping
screw 4,2x19 - 14 pcs.

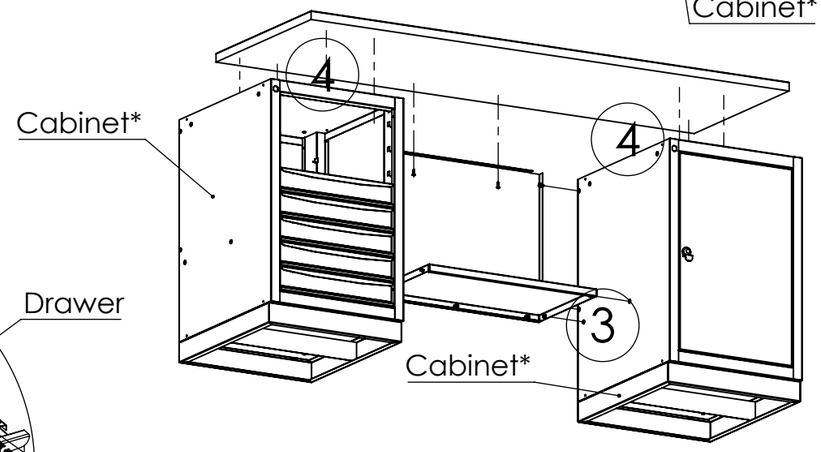

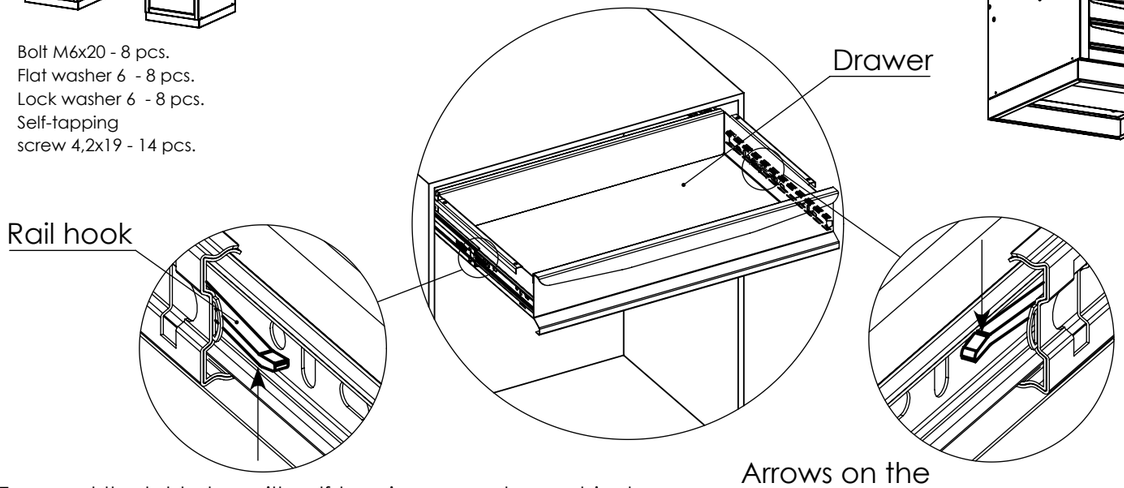

To mount the table-top with self-tapping screws to a cabinet with drawers, **it is necessary to remove** the upper drawers from the cabinet.
To do this:
pull out the drawer as far to the stop, press the hooks on the rails on both sides of the drawer - one up, the other down, and continue to pull out the drawer.

Arrows on the images show the direction of of the hooks.

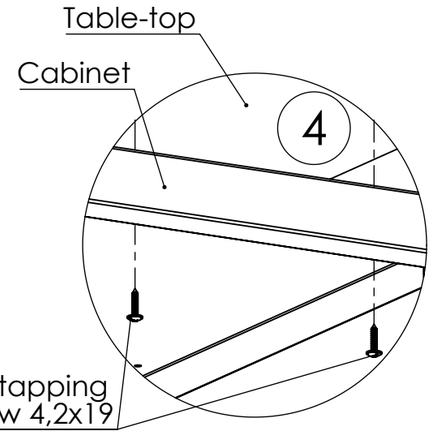

***There may be changes to the design of the product that do not impair its quality, which are not described in this instruction.*

**The design of the cabinets (variation of drawers) may change depending on the individual order. Shown is a general image.*